

# LoRa<sup>®</sup> AT COMMAND GUIDE

## APPLY FOR:

1. RYLR497
2. RYLR907

## THE SEQUENCE OF USING AT COMMAND

1. Use “**AT+ADDRESS**” to set ADDRESS. The ADDRESS is regard as the identification of transmitter or specified receiver.
2. Use “**AT+NETWORKID**” to set the ID of LoRa network. This is a Group function. Only by setting the same NETWORKID can the modules communicate with each other. If the ADDRESS of specified receiver is belong to different group, it is not able to communicate with each other.
3. Use” **AT+BAND**” to set the center frequency of wireless band. The transmitter and the receiver are required to use the same frequency to communicate with each other.
4. Use” **AT+PARAMETER**” to set the RF wireless parameters. The transmitter and the receiver are required to set the same parameters to communicate with each other. The parameters of which as follows:

[1] <Spreading Factor>: The larger the SF is, the better the sensitivity is. But the transmission time will take longer.

[2] <Bandwidth>: The smaller the bandwidth is, the better the sensitivity is. But the transmission time will take longer.

[3] <Coding Rate>: The coding rate will be the fastest if setting it as 1.

[4] <Programmed Preamble>: Preamble code. If the preamble code is bigger, it will result in the less opportunity of losing data. Generally preamble code can be set above 10 if under the permission of the transmission time.

Communication within 3 km: Recommend to set “**AT + PARAMETER = 9,7,1,7**”

More than 3 km: Recommend to set “**AT + PARAMETER = 12,7,1,7**”

5. Use “**AT+SEND**” to send data to the specified ADDRESS. Please use “LoRa Modem Calculator Tool” to calculate the transmission time. Due to the program used by the module, the payload part will increase more 8 bytes than the actual data length.

## AT Command Set

It is required to key in “enter” or “\r\n” in the end of all AT Commands.

Add “?” in the end of the commands to ask the current setting value.

It is required to wait until the module replies +OK so that you can execute the next AT command.

### 1. AT Test if the module can respond to Commands.

Syntax	Response
AT	+OK

### 2. Software RESET

Syntax	Response
AT+RESET	+RESET +READY

### 3. AT+MODE Set the wireless work mode.

Syntax	Response
AT+MODE=<Parameter> <Parameter>range 0 to 2 0 : Transmit and Receive mode (default). 1 : Sleep mode. <i>*During the sleep mode, once the pin3(RX) receive any input data, the module will be woken up.</i> 2 : CAD mode. CAD mode will wake up module when receiving signal, and submit +MODE=0 to transmit and receive mode. Example : Set the sleep mode, <b>AT+MODE=1</b>	+OK
AT+MODE?	'When MODE=0 +MODE=0
AT+MODE?	'When MODE=1 +READY 'Enter MODE=1
AT+MODE?	'When MODE=2 +MODE=0 'Enter MODE=2

**4. AT+IPR** Set the UART baud rate.

Syntax	Response
<p>AT+IPR=&lt;rate&gt;</p> <p>&lt;rate&gt; is the UART baud rate :</p> <p>300 1200 4800 9600 19200 28800 38400 57600 115200(default)</p> <p>Example: Set the baud rate as 9600, <i>*The settings will be memorized in EEPROM.</i> <a href="#">AT+IPR=9600</a></p>	+OK
AT+IPR?	+IPR=9600

## 5. AT+PARAMETER Set the RF parameters.

Syntax	Response
AT+PARAMETER=<Spreading Factor>, <Bandwidth>,<Coding Rate>, <Programmed Preamble> <Spreading Factor>5~12, (default 12) <Bandwidth>0~9, list as below : 0: 7.8KHz(not recommended, over spec.) 1:10.4KHz(not recommended, over spec.) 2: 15.6KHz(not recommended) 3: 20.8 KHz(not recommended) 4: 31.25 KHz(not recommended) 5: 41.7 KHz 6: 62.5 KHz 7: 125 KHz (default) 8: 250 KHz 9: 500 KHz <Coding Rate>1~4, (default 1) <Programmed Preamble> 4~255, (default 12) Example: Set the parameters as below, <Spreading Factor> 7, <Bandwidth> 20.8KHz, <Coding Rate> 4, <Programmed Preamble> 5. AT+PARAMETER=7,3,4,5	+OK
AT+PARAMETER?	+PARAMETER=7,3,4,5

## 6. AT+BAND Set RF Frequency.

Syntax	Response
AT+BAND=<parameter> <parameter>is the RF Frequency, Unit is Hz 470000000: 470000000Hz(default: RYLR497) 915000000: 915000000Hz(default: RYLR907) Example: Set the frequency as 868500000Hz, AT+BAND=868500000	+OK
AT+BAND?	+BAND=868500000



**10. AT+CRFOP** Set the RF output power.

Syntax	Response
AT+CRFOP=<power> <power>0~22 dBm 22: 22dBm(default) 21: 21dBm 20: 20dBm ..... 01: 1dBm 00: 0dBm Example: Set the output power as 10dBm, <a href="#">AT+CRFOP=10</a>	+OK
AT+CRFOP?	+CRFOP=10

**11. AT+RXBOOST** Set the receive boost mode on/off

Syntax	Response
AT+RXBOOST=<off/on> <off/on>range 0 to 1 0: Off 1: On(default)	+OK
AT+RXBOOST?	+RXBOOST=1

**12. AT+SEND** Send data to the appointed address by Command Mode.

Syntax	Response
AT+SEND=<Address>,<Payload Length>,<Data> <Address>0~65535, When the <Address> is 0, it will send data to all address (From 0 to 65535.) <Payload Length> Maximum 240bytes <Data>ASCII Format Example : Send HELLO string to the Address 50, <a href="#">AT+SEND=50,5,HELLO</a>	+OK
Search last transmit data, AT+SEND?	+SEND=50,5,HELLO

**13. +RCV** Show the received data actively.

Syntax	Response
+RCV=<Address>,<Length>,<Data>,<RSSI>,<SNR>, <Address> Transmitter Address ID <Length> Data Length <Data> ASCII Format Data <RSSI> Received Signal Strength Indicator <SNR> Signal-to-noise ratio	
Example: Module received the ID Address 50 send 5 bytes data, Content is HELLO string, RSSI is -99dBm, SNR is 40, It will show as below. <b>+RCV=50, 5, HELLO, -99, 40</b>	

**14. AT+UID?** To inquire module ID.

Syntax	Response
AT+UID?	+UID=104737333437353600170029

**15. AT+VER?** To inquire the firmware version.

Syntax	Response
AT+VER?	+VER=RYLR407_Vx.x.x(RYLR407) +VER=RYLR907_Vx.x.x(RYLR907)

**16. AT+FACTORY** Set all current parameters to manufacturer defaults.

Syntax	Response
AT+FACTORY Manufacturer defaults: BAND : 915MHz UART : 115200 Spreading Factor : 12 Bandwidth : 125kHz Coding Rate : 1 Preamble Length : 12 Address : 0 Network ID : 0 CRFOP : 22	+FACTORY

**17. Other messages**

Narrative	Response
After RESET	+RESET +READY

**18. Error result codes**

Narrative	Response
There is not "enter" or 0x0D 0x0A in the end of the AT Command.	+ERR=1
The head of AT command is not "AT" string.	+ERR=2
There is not "=" symbol in the AT command.	+ERR=3
Unknow command.	+ERR=4
TX is over times.	+ERR=10
RX is over times.	+ERR=11
CRC error.	+ERR=12
TX data more than 240bytes.	+ERR=13
Unknow error.	+ERR=15
Last TX is uncompleted.	+ERR=17